

Pure Silk Veil

3122-2.03



- +** Light as silk
- +** Cocoon cream
- +** Extra spreadability


Phase	Name	INCI	Supplier	%
A1	DEMINEALIZED WATER	WATER	–	72.68
	ACTIGUM™ CS 11 QD	SCLEROTIUM GUM	CARGILL	1.00
A2	GLYCERIN	GLYCERIN	–	3.00
	PROPANEDIOL	PROPANEDIOL	–	2.00
	COSPHADERM® DICAPO NATURAL	CAPRYLYL GLYCOL, PROPANEDIOL, GLYCERYL PALMITATE	COSPHATEC	1.00
	LECINOL® S-10	HYDROGENATED LECITHIN	NIKKO CHEMICALS CO.	0.30
	EMULIUM® DERMOLEA MB	POLYGLYCERYL-6 DISTEARATE, CANDELILLA/JOJOBA/RICE BRAN POLYGLYCERYL-3 ESTERS	GATTEFOSSE	3.50
	CETEARYL ALCOHOL	CETEARYL ALCOHOL	–	0.50
B	LIPOCIRE™ A SG	C10-18 TRIGLYCERIDES	GATTEFOSSE	2.00
	COCOATE™ BG MB	BUTYLENE GLYCOL COCOATE	GATTEFOSSE	3.00
	MOD MB	OCTYLDODECYL MYRISTATE	GATTEFOSSE	3.00
	LIPEX® SHEASOLVE	SHEA BUTTER ETHYL ESTERS	AAK	1.00
C	JEECHEM® NDA-LC	C9-12 ALKANE	VANTAGE	4.00
	SILKARESS™	FRUCTOSE, WATER, PROPANEDIOL, MORUS ALBA LEAF EXTRACT	GATTEFOSSE	2.00
D	UNICERT® RED K07004-J (0.1% SOL.)	WATER, RED 4	SENSIENT	0.55
	UNICERT® BLUE 05601-J (0.1% SOL.)	WATER, BLUE 1	SENSIENT	0.05
	UNICERT® YELLOW 08005-J (0.1% SOL.)	WATER, YELLOW 5	SENSIENT	0.12
E	PERFUME POLAIRE 1 ITM0726034	PARFUM	ARGEVILLE	0.20
F	CITRIC ACID (10% SOL.)	WATER, CITRIC ACID	–	0.10
				100.00

Operating instructions

- Heat water phase A1 to 65-70°C and disperse Actigum™ CS 11 QD under high shear (rotor stator) for 30 minutes.
- Prepare premix phase A2 and add into water phase A1. Disperse under high shear (rotor stator) until the gel is formed. Check homogeneity of water phase A.
- Weigh oil phase B and heat at 65-70 °C.
- Proceed with the emulsion of oil phase B into water phase A at 65-70°C under moderate shear (1500rpm) and then increase to high shear (3000rpm) for 10-15 minutes.
- Cool down under moderate mixing until reaching 40°C. Add phase C under moderate shear and mix for 5 minutes. Check that the emulsion is homogeneous.
- Continue to cool down under moderate mixing and under 30°C add ingredients of phase D+E one by one.
- Check pH and adjust, if necessary, with phase F.

Pure Silk Veil

3122-2.03

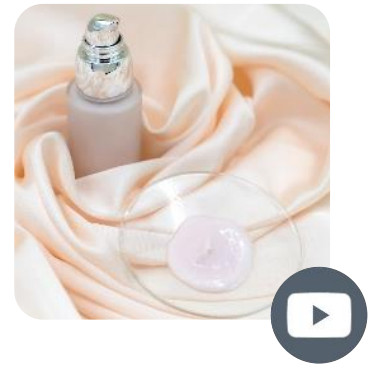

Description

Envelop your skin in a delicate formula as light and soft as silk, offering an immediate sensation of comfort and refinement.

Enriched with **Silkaress™**, inspired by the gentle strength of silk, the formula helps the skin adapt to climatic stressors by reinforcing its resilience and surrounding it with a silky, protective veil.

This sensorial experience is elevated by **Emulium® Dermolea MB**, an active emulsifier that brings a light after-feel while delivering moisturizing and soothing benefits for a comfortable finish.

Specifications

- + Aspect: light pink fluid cream
- + >99% natural origin (ISO 16128)
- + Viscosity Brookfield RV (spindle A, speed 5): approx. 25 000 mPa.s after 24h
- + pH: 5.6 ± 0.3

Ingredients

- **Emulium® Dermolea MB** is a soothing O/W emulsifier, creating light textures with good spreadability. To ensure a perfect stability, Lecinol® S-10, a hydrogenated lecithin from natural origin, was added as co-emulsifier.
- **Lipocire™ A SG** brings creaminess and a melting sensation thanks to its melting point close to the body temperature.
- The blend of **MOD MB** and **Cocoate™ BG MB** facilitates spreadability, gives a light feeling during application and leaves a pleasant soft and smooth finish.
- Cosphaderm® Dicapo Natural gives a full-spectrum antimicrobial protection over a broad pH range (3.5 - 7.5).
- Actigum™ CS 11 QD is a natural origin biopolymer. It thickens the formula while maintaining its fluidity.
- The volatile solvent Jeechem® NDA-LC regulates the drying time.
- **Silkaress™** is a bio-inspired active that boosts skin resilience by helping it adapt to climatic stressors, while strengthening the barrier for a silk-like, soft and comfortable feel. Thanks to Touchy Finger® measurements, its softness is not just perceived: it's proven, with skin feeling noticeably smoother and gentler to the touch day after day.